MERLIN

REMOTE ORDERING OPTIONS

Art ID:
M-842-RS



SPECIFICATIONS
Merlin
Frequency - 433Mhz
Buttons - 2
Battery - CR2025

Art ID:
MC100AML



See **page 13-14**


SPECIFICATIONS
Chamberlain
Frequency - Multiple
Buttons - 2
Battery - CR2032

Art ID:
SGT040



SPECIFICATIONS
>>>SGT
Frequency - 433Mhz
Buttons - 4
Battery - LR27A

Art ID:
M-BT

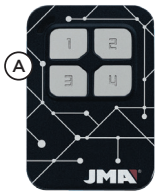

See **page 33-34**

SPECIFICATIONS
JMA
Cloning remote
Buttons - 4
Battery - CR2032

COMPATIBLE WITH


M834


M128


M-832


M-844

RECEIVER COMPATIBILITY

- Suits Models:

Merlin M-530, M-532, M230T, M430R receivers

Remote Programming Steps

Remote Programming for Sectional/Tilt Doors

1. Remove the light cover then remove the coloured plastic rectangular strip located underneath. This will reveal a Red "Learn/Delete" button.
2. Push "Learn/Delete" button for 2 seconds – the lamp will blink continuously to alert you that it is in Learn Mode.
3. Push the big button on your remote for 2 seconds.
4. Push the small button on your remote for 2 seconds. Minimum of 1 second is required between each action. Your remote will now operate with your motor.

Remote Programming for Roller Doors

1. Remove the coloured plastic rectangular strip located next to the Merlin label on the front of the motor. This will reveal a Red "Learn/Delete" button.
2. Push "Learn/Delete" button for 2 seconds – the lamp will blink continuously to alert you that it is in Learn Mode.
3. Push the big button on your remote for 2 seconds.
4. Push the small button on your remote for 2 seconds. Minimum of 1 second is required between each action. Your remote will now operate with your motor.

Deleting All Remotes from Receiver

1. Push "Learn/Delete" button on the receiver board (garage door motor) for 11 seconds. Light will blink for a period and then switch off.

Whilst every effort has been made to ensure the accuracy of the information supplied herein, we assume no liability for any errors or omissions. Information contained in this document is subject to change without prior notice.